



NO.	Model	Type	Adapter Connector Terminals
1	DRK20B (M81969/19-06)	Metal Extraction Tool	For 20# front-extraction terminals in J598, MIL-C-26482 Series I, MIL-C-26500 and MIL-C-83723 military standard connectors.
2	DRK20BL	Metal Extraction Tool	
3	DRK16B (M81969/19-01)	Metal Extraction Tool	For 16# front-extraction terminals in MIL-DTL 5015 (SAE-AS50151), J598, MIL-C-26482 Series I, MIL-C-26500 and MIL-C-83723 military standard connectors.
4	DRK16BL	Metal Extraction Tool	
5	DRK12B (M81969/19-02)	Metal Extraction Tool	For 12# front-extraction terminals in MIL-DTL-5015 SERIES II (MS3400,AS50151), J598, MIL-C-26482 Series I, MIL-C-26500, and MIL-C-83723 military standard connectors.
6	DRK12BL	Metal Extraction Tool	
7	XT-DRK16B	Metal Extraction Tool	For Amphenol 16# front-extraction terminals in AN/MS/GT MIL-DTL-5015 series circular connectors.
8	XT-DRK12B	Metal Extraction Tool	For Amphenol 12# front-extraction terminal in AN/MS/GT MIL-DTL-5015 series circular connectors.
9	DAK145	Metal Insertion Tool	For military standard MIL-DTL-24308 D-Sub connectors.
10	DAK83S-20 (M81969/17-09)	Metal Insertion Tool	For VG95234/AS95234 connectors.
11	DAK12B (M81969/17-05)	Metal Insertion Tool	For MIL-DTL-26482 Series I, MIL-DTL-26500, MIL-DTL-5015 SERIES II (MS3400,AS50151) connectors.
12	DAK16B (M81969/17-04)	Metal Insertion Tool	For MIL-DTL-26482 Series I, MIL-DTL-26500, MIL-C-38300 connectors.
13	DAK20B (M81969/17-03)	Metal Insertion Tool	For MIL-DTL-26482 Series I, MIL-DTL-26500, MIL-C-38300 connectors.
14	XT-DAK16B	Metal Insertion Tool	For installing Amphenol #16 terminals in AN/MS/GT MIL-DTL-5015(VG95234) series connectors.
15	XT-DAK12B	Metal Insertion Tool	For installing Amphenol #12 terminal in AN/MS/GT MIL-DTL-5015(VG95234) series circular connectors.
16	M81969/14-04	Plastic Insertion & Extraction Tool	For J599/JY27/D38999 series, terminal #12.
17	M81969/14-03	Plastic Insertion & Extraction Tool	For J599/JY27/D38999 series, terminal #16.
18	M81969/14-10	Plastic Insertion & Extraction Tool	For J599/JY27/D38999 series, terminal #20.
19	M81969/14-01	Plastic Insertion & Extraction Tool	For J599/JY27/D38999 series, terminal #22.
20	XCQZ-Φ1	Plastic Insertion & Extraction Tool	XC, XCA, XKE series terminals.
21	XCQZ-Φ1.5	Plastic Insertion & Extraction Tool	XC, XCA, XKE series terminals.

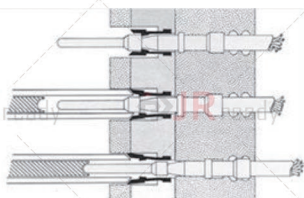

Terminal extraction principle: The extraction tool is inserted horizontally into the connector to open the connector claws and release the terminals.

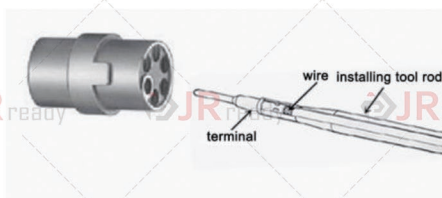

Terminal insertion principle: The insertion tool rod wraps around the terminal, with the front end of the installing tool rod pressing against the terminal shoulder, and then horizontally insert the terminal into the connector to complete the terminal insertion.